

DIRECTV®

KNOW YOUR ON-SCREEN GUIDE

TV WINDOW

Watch your program while using the guide.

TIMELINE

To see what's on later, navigate forward with the **RIGHT ARROW**. Use the **LEFT ARROW** to go back.

ON DEMAND

The **PLUS** sign next to a channel name indicates that On Demand content is available. Highlight the channel name and then press **SELECT** to access.

Genie® must be connected to the Internet.


CHANNELS

Highlight the channel abbreviation to get the channel description.

RESTART

The **RESTART ARROW** next to a show means you can restart the show from the beginning. Select the show, then press **REWIND** to watch from the beginning.

Genie® must be connected to the Internet. Restart not available on all programs. Go to directv.com/restart for a list of programs.

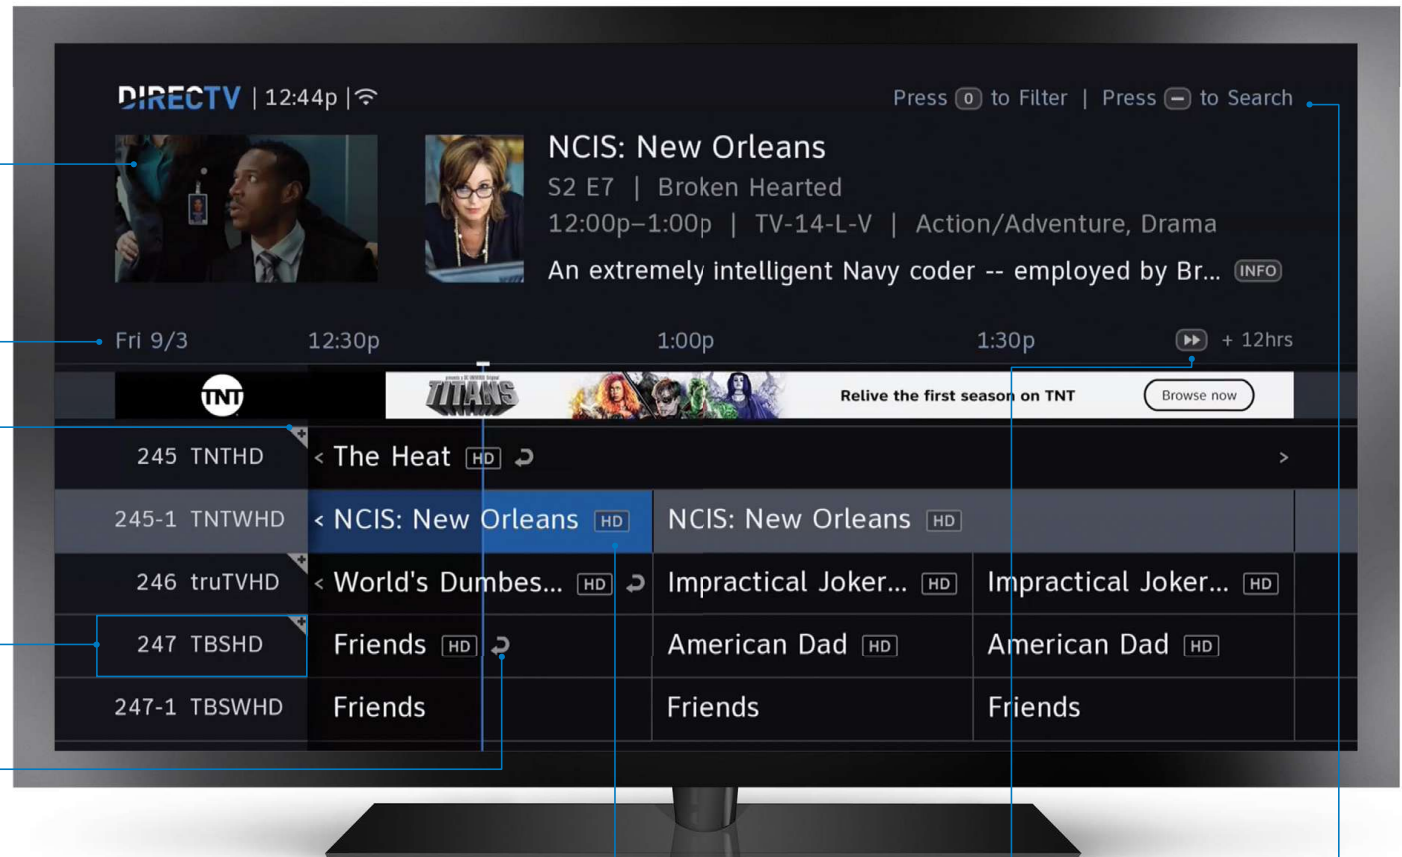

HIGHLIGHT BAR

Use the **ARROW** buttons to highlight a program and view its description. To tune to a highlighted program, press **SELECT**. Press the **RECORD** button on your remote once, to record an episode.

ADVANCE TIMELINE

Press **FAST FORWARD** to advance 12 hours.
Press **REWIND** to go back 12 hours.

SEARCH & GUIDE OPTIONS

Press **DASH** to search. Press **0** to sort programming by category, move to a specific date and time, change your **FAVORITES LIST** and see On Demand titles.